

## HOW TO RESTART YOUR GOODWE INVERTER

Restarting your inverter can be done in just a few simple steps and can often solve many system issues without any further troubleshooting.

**Step 1. Turn off your AC isolator. This is the Solar Supply Main Switch on your Switchboard.**

**Step 2. Turn off your system's DC isolator. You'll find this switch mounted on your wall.**

**Step 3. Please wait for your system to completely power down. This will take 10 to 15 seconds.**

**Step 4. Please turn back on your DC isolator, followed by your AC isolator.**

**Step 5. Wait a couple of minutes for your system to reboot.**

All inverters take at least one minute to restart, and you may see the lights flashing while the inverter does internal testing. There will also be a variety of messages on the screen again as it tests. This is quite normal.

If you still need assistance, please complete the [contact form on Lodge a System Complaint page on our website](#).