



Future Solar WA

## HOW TO RESTART YOUR FRONIUS INVERTER

Restarting your inverter can be done in just a few simple steps and can often solve many system issues without any further troubleshooting.

**Step 1.** Turn off your AC isolator. This is the Solar Supply Main Switch on your Switchboard.

**Step 2.** Turn off your system's DC isolator. You'll find this switch on the underside of your inverter.

**Step 3.** Please wait for your system to completely power down. This will take 10 to 15 seconds.

**Step 4.** Please turn back on your DC isolator, followed by your AC isolator.

**Step 5.** Wait a couple of minutes for your system to reboot

All inverters take at least one minute to restart, and you may see the lights flashing while the inverter does internal testing. There will also be a variety of messages on the screen again as it tests. This is quite normal.

If you still need assistance, please complete the [contact form on Lodge a System Complaint page on our website.](#)

